




MEZZANINE LEVEL - HIGH DORMER




MEZZANINE LEVEL - LOOKING SOUTH

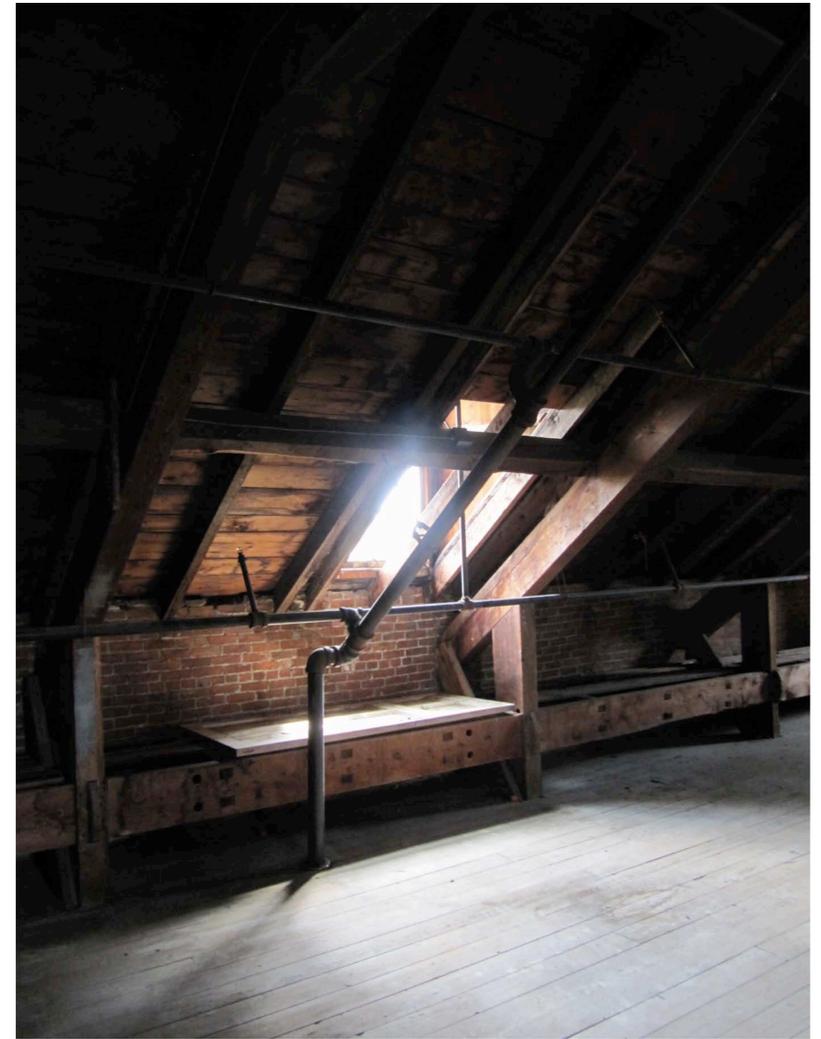

ATTIC LEVEL - LOW DORMER



ATTIC LEVEL - LOOKING UP TO MEZZANINE

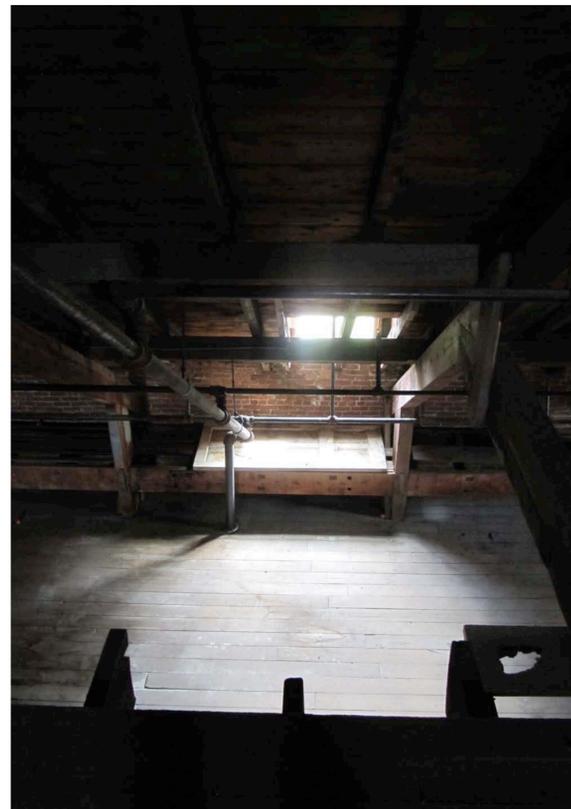

MEZZANINE LEVEL - LOOKING DOWN TO ATTIC



MEZZANINE LEVEL - LOOKING NORTH



ATTIC LEVEL - BELOW MEZZANINE, NORTH END

351 NORTH AVE
BURLINGTON, VERMONT

COPYRIGHT © 2015 ALL RIGHTS RESERVED
DUNCAN • WISNIEWSKI ARCHITECTURE
A Professional Corporation

ZONING APPLICATION

**Duncan
Wisniewski** 
ARCHITECTURE
255 SOUTH CHAMPLAIN STREET
BURLINGTON, VERMONT 05401
T: 802.864.6693

DATE: 06.30.2015

A0.5